

CR-250

CITYRANGE CRANE



Maximum rated lifting capacity: 25t 360°
Maximum boom length: 28.0m



CR-250 CITYRANGE CRANE

SPECIFICATION

CRANE SPECIFICATION

Performance

Maximum rated lifting capacity:

25 metric tons × 2.8 m

6.7m-28.0m (6 section) Boom length: 5.4m- 8.2m (2 section, optional)

Fly jib length: Boom derricking angle: -10.5 -81

*Boom derricking time: 33sec. (0°-81°)

*Boom extending time: 68 sec. (6.7 m - 28.0 m) * Hoisting line speed

104m/min. (at 4th layer) Main winch:

Auxiliary winch: 93m/min. (at 2nd layer) * Hoisting hook speed

Main winch (parts of line; 7):

14.9m/min. (at 4th layer)

Auxiliary winch (parts of line; 1):

93m/min. (at 2nd layer)

*Slewing speed:

(*Speed: Subject to no load)

Hoisting Ropes

Main winch:

Diameter: 14mm

160m Length: Auxiliary winch;

Diameter: Length:

Hydraulic System

Oil nump 4 pumps, plunger and gear type

Axial plunger type Hoisting motor: Axial plunger type Slewing motor: Cylinder: Double acting type

Double acting with integral check Control valve:

and relief valves

440 lit. Oil reservoir capacity:

Winch System

Main winch & Auxiliary winch:

Driven by axial plunger type hoisting motor with gear reduction. Controlled independently by respective

operating lever.

Equipped with automatic brake.

Safety devices

ACS (Automatic Crane Stopper, with

Voice alarm)

Boom falling prevention device Overhoist prevention device Drum lock device (on aux. winch) Automatic winch brake

Irregular winding prevention device

Hydraulic safety valve

Outrigger lock device

Option

Fly iib

Hook for 25 ton

Amplifier

CARRIER SPECIFICATION

General dimensions & G.V.W.

Overall length: 9.065mm approx. Overall width: 2,395mm approx. Overall height: 3,400mm approx.

3,360mm

(With spring lock cylinders fully retracted) Wheel base: 3,500mm

Treads: Front & Rear: 1,965mm Center to center of extended outriggers:

6,000mm (Fully extended)

Gross vehicle weight: approx. 24,000kg Front & Rear: approx. 12,000kg

Carrier

4×2/4×4 Drive system:

Maximum traveling speed: 49km/h

Gradeability $(tan \theta)$: 60% (computed @G.V.W. = 24,000kg)

Minimum turning radius: 5.0m (4 wheel steer) (center of extreme outer tire): 8.3m (2 wheel steer)

Engine:

Maker Mitsubishi

Model: 6D16-TE1 (Turbo-charged)

Type: 4 cycle, water cooled, direct injection

diesel engine

No. of cylinder: Piston displacement: 7.545cc

Max.output horsepower: 158KW/2,800r.p.m. 696N-m/1,600r.p.m. ies with Draft Directive (10201/96) Max.output torque:

NOTE: The engine comp

-95/0209 (COD); (Stage I limit).

Engine mounted 3 elements Torque converter: 1 stage (with lock up clutch)
Remote mounted full automatic with

Transmission:

transfer gear box 4 forward & 2 reverse

speed (with Hi-Low selector)

Front & Rear: Planetary, drive/steer type Axle: Front & Rear: Coil spring equipped with hydraulic

Suspension: shock absorber and hydraulic locking

device

Steering: Full hydraulic power steering with

reverse steering correction mechanism Five steering modes available (with automatic rear wheel steering lock system)

1. Front wheel steer

2. 4-wheel coordinated steer 3. 4-wheel crab steer

4. Rear wheel steer

Independent front and rear steer

Service brake: Air-over hydraulic disk brake on 4 wheels (2 circuit)

Equipped with service brake lock

Spring applied, electrically air released Parking brake: parking brake mounted on front axle, internal expanding type

Auxiliary brake: Exhaust brake

Electric system: 24V

24V-40A Alternator: 12V-115F51×2 Battery:

Fuel tank capacity: 300 lit.

Driver's cab: All steel welded construction,

1 person, Air-conditioned Front & Rear: 385/95R25 170E ROAD

Safety devices:

Brake.

Emergency steering device Brake fluid leak warning device Suspension lock device

Service brake lock Engine overrun alarm Over-shift prevention device

Radiator coolant leakage warning device Motor driven retractable side mirrors

MRATED LIFTING CAPACITY (1)

Based on *BS 1757: 1986 *DIN 15019-2 *75% of tipping loads

Working		SALES IN CONTRACTOR OF THE PARTY OF THE PART	ers fully ex			Ou			ely extende	eď		CONTROL OF THE PARTY OF THE PAR	Control of the Contro	y retracted	
radius		MODELLESS, STREET, STREET, S	- 360° full	AND DESCRIPTION OF THE PARTY OF			AND DESCRIPTION OF THE PERSON	- 360° fu	-		A MARKET CONTRACTOR OF THE PARTY OF THE PART		A STATE OF THE PARTY OF THE PAR	s) - 360° ft	AND DESCRIPTION OF THE PARTY OF
(m)	6.7m	11.0m	15.2m	21.6m	28.0m	6.7m	11.0m	15.2m	21.6m	28.0m	6.7m	11.0m	15.2m	21.6m	28.0m
	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom	Boom
2.8	25.00	12.00	12.00			25.00	12.00	12.00			10.00	9.50	7.90		
3.0	22.00	12.00	12.00	8.00		22.00	12.00	12.00	8.00		8.75	8.45	7.15	6.50	
3.5	20.00	12.00	12.00	8.00		20.00	12.00	12.00	8.00		6.60	6.30	5.65	5.45	
4.0	17.00	12.00	12.00	8.00	6.50	17.00	12.00	12.00	8.00	6.50	5.10	4.85	4.55	4.55	4.25
4.5	15.00	12.00	12.00	8.00	6.50	15.00	12.00	12.00	8.00	6.50	4.10	3.85	3.70	3.80	3.65
5.0		12.00	12.00	8.00	6.50		12.00	12.00	8.00	6.50		3.10	3.00	3.20	3.15
5.5		12.00	12.00	8.00	6.50		9.80	9.70	8.00	6.50		2.50	2.40	2.70	2.70
6.0		12.00	11.50	8.00	6.50		8.20	8.10	8.00	6.50		2.05	1.95	2.30	2.35
6.5		11.30	10.60	8.00	6.50		7.00	6.85	7.25	6.50		1.60	1.55	1.95	2.00
7.0		10.15	9.90	7.85	6.50		6.00	5.90	6.55	6.50		1.25	1.20	1.65	1.75
8.0		7.90	7.80	7.10	5.90		4.60	4.50	5.10	5.40		0.70	0.60	1.15	1.30
9.0		6.20	6.10	6.35	5.35		3.60	3.45	4.05	4.40					
10.0			4.90	5.45	4.80			2.65	3.30	3.60					
11.0			4.00	4.60	4.30			2.05	2.65	3.00					
12.0			3.25	3.85	3.85			1.55	2.15	2.50					
13.0			2.65	3.30	3.50			1.15	1.75	2.10					
14.0				2.80	3.10				1.40	1.75					
15.0				2.35	2.70				1.15	1.45					
16.0		es 20 to 100 to 100 to 00 to 0		2.00	2.35				0.90	1.20					
17.0				1.70	2.00				0.70	0.95					
18.0				1.45	1.75				0.50	0.80					
19.0				1.20	1.50				0.35	0.60					
20.0	NA MANAGAMBAN MANAGAMAN MA	SECTION SALES CONTRACTOR	[19.7r	n] 1.05	1.30		NAME OF TAXABLE PARTY OF TAXABLE PARTY.			0.45		DECTROOR CONTRACTOR AND ADDRESS.			
21.0					1.15					0.35					
22.0		Land to the Control of the Control o			0.95				-						
23.0					0.80										
24.0	SELECTION OF SELEC				0.70										
25.0					0.60										
26.0	AND DESCRIPTION OF THE PARTY OF	ALLE AND DESCRIPTION OF THE PARTY NAMED IN	and the same of th		0.50			-		The state of the s	The second second second				
Standard hook	for 25 ton (optional)	25 ton for 22 ton			for 25 ton (optional)	for 22 ton				for 25 ton (optional) for 22 ton		hiseographysicanecom			
Hook mass	200 kg		200) kg		200 kg	200 kg				200 kg		200) kg	
Parts of line	7			1		7	4				7	4			
ritical boom angle		-	inspense	-		*******	-		-	35°	-	20"	51°	62"	69*

(Unit : Metric ton)

ERATED LIFTING CAPACITY (2)

Outriggers fully extended (6.0m) - 360* full range							Outriggers intermediately extended (4.5m) - 360° full range						
Boom	Offse	t 5'	Offse	t 25'	Offse	45	Boom	Offset	5"	Offset	25"	Offse	t 45°
angle (*)	Working radius(m)	Load (t)	Working radius (m)	Load (t)	Working radius (m)	Load (t)	angle (*)	Working radius(m)	Load (1)	Working radius (m)	Load (t)	Working radius(m)	Load (t)
81.0	5.2	3.00	7.0	2.50	8.3	1.55	81.0	5.2	3.00	7.0	2.50	8.3	1.55
77.7	7.2	3.00	8.9	2.50	10.0	1.55	77.7	7.2	3.00	8.9	2.50	10.0	1.55
75.0	8.9	3.00	10.4	2.30	11.4	1.50	75.0	8.9	3.00	10.4	2.30	11.4	1.50
73.0	10.0	3.00	11.5	2.14	12.4	1.46	73.0	10.0	3.00	11,5	2.14	12.4	1.46
70.0	11.7	2.60	13.1	1.94	13.9	1,42	70.0	11.7	2.60	13.1	1.94	13.9	1.42
65.0	14.3	2.15	15.7	1.69	16.3	1.35	69.0	12.2	2.50	13.6	1.88	14.4	1.40
60.0	16.8	1.83	18.1	1.49	18.7	1.30	67.0	13.2	2.14	14.7	1.77	15.3	1.37
55.0	19.2	1.55	20.3	1.35	20.8	1.25	64.0	14.7	1.63	16.0	1.46	16.8	1.33
54.0	19.6	1.45	20.7	1.32	21.2	1.22	60.0	16.6	1.14	17.9	1.02	18.5	1.00
52.0	20.4	1.29	21.5	1.19	22.0	1.18	55.0	18.9	0.70	19.9	0.67	20.7	0.60
50.0	21.2	1.14	22.3	1.05	22.7	1.08	50.0	21.0	0.39	21.9	0.37		
48.0	22.0	1.01	23.0	0.94	23.3	0.99	Critical boom angle	46	3*	48	3*	5	3
45.0	23.2	0.82	24,1	0.77								(Unit	: Metric
40.0	25.0	0.58	25.8	0.54									
AND THE RESERVE OF THE PERSON													

Outriggers fully extended (6.0m) - 360" full range						Outriggers intermediately extended (4.5m) - 360° full range							
Boom	Offset	5'	Offse	t 25'	Offse	45	Boom	Offset	5"	Offset	25"	Offset	45
angle (*)	Working radius(m)	Load (1)	Working radius(m)	Load (1)	Working radius (m)	Load (t)	angle (*)	Working radius(m)	Load (t)	Working radius(m)	Load (t)	Working radius(m)	Load (1)
81.0	6.0	2.00	8.7	1.20	10.5	0.80	81.0	6.0	2.00	8.7	1.20	10.5	0.80
77.0	8.7	2.00	11.1	1.20	12.7	0.80	77.0	8.7	2.00	11.1	1.20	12.7	0.80
75.0	10.0	2.00	12.2	1.20	13.7	0.78	75.0	10.0	2.00	12.2	1.20	13.7	0.78
72.0	11.9	1.81	14.0	1.20	15.3	0.75	72.0	11.9	1.81	14.0	1.20	15.3	0.75
70.0	13.0	1.71	15.1	1.18	16.4	0.74	70.0	13.0	1.71	15.1	1.18	16.4	0.74
65.0	15.9	1.49	17.8	1.12	18.9	0.72	65.0	15.9	1.49	17.8	1.12	18.9	0.72
60.0	18.6	1.33	20.3	1.05	21.3	0.69	63.0	16.9	1.26	18.8	1.09	19.8	0.70
55.0	21.2	1.20	22.7	0.98	23.5	0.67	60.0	18.4	0.98	20.2	0.87	21.3	0.69
53.0	22.1	1.14	23.6	0.95	24.3	0.66	58.0	19.4	0.81	21.2	0.72	22.2	0.68
50.0	23.5	0.96	24.9	0.77	25.4	0.65	55.0	20.8	0.60	22.5	0.54	23.3	0.53
47.0	24.7	0.80	26.1	0.63	26.5	0.64	50.0	23.1	0.31				
45.0	25.6	0.69	26.8	0.56			Critical boom angle	48	7	53		50	3"
40.0	27.5	0.49	28.5	0.39					,			(Unit	: Metric
35.0	29.1	0.33		0*		e*							

ERATED LIFTING CAPACITY (3)

Working	Stationary on rubber (without outriggers)								
radius	6.7m	Boom	11.0m	Boom	15.2m Boom				
(m)	Over front	360° full range	Over front	360° full range	Over front	360° full			
3.0		6.00		5.50		5.20			
3.5	8.50	4.50	8.50	4.10	8.00	3.80			
4.0	8.50	3.30	8.50	3.20	8.00	3.00			
4.5	7.50	2.55	7.20	2.55	6.50	2.40			
5.0			6.10	2.00	5.40	1.90			
5.5			5.10	1.55	4.55	1.50			
6.0			4.25	1.20	3.85	1.15			
6.5			3.55	0.90	3.30	0.85			
7.0			3.00	0.65	2.80				
8.0			2.15		2.05				
9.0			1.55		1.50				
10.0					1.00				
11.0					0.60				
Standard hook	for 22 ton								
Hook mass	200 kg								
Parts of line		6		4					
Critical boom angle		_		30*	33*	57°			

Working		PICK		outriggers)	nvn)			
radius	6.7m	Boom	11.0n	Boom	15.2m Boom			
(m)	Over front	360* full range	Over front	360° full range	Over front	360' full range		
3.0		4.80		4.40		4.00		
3.5	6.80	3.60	6.40	3.30	5.90	3.00		
4.0	6.80	2.65	6.40	2.55	5.90	2.40		
4.5	6.00	2.05	5.50	2.05	5.00	1.90		
5.0			4.75	1.50	4.30	1,40		
5.5			4.10	1.05	3.65	1.00		
6.0			3.40	0.65	3.10	0.60		
6.5			2.85		2.65			
7.0			2.40		2.25			
8.0			1.65		1.60			
9.0	Andrews and Anthropology		1.00		1.00			
10.0					0.50			
11.0								
Standard hook			for	22 ton	NAME OF TAXABLE PARTY O			
Hook mass	Martin - Martin Colonia (Martin Colonia Coloni	THE STREET STREET, STR	200 kg					
Parts of line		6		4				
Critical boom angle				42"	35	60"		

Notes for the Rated Lifting Capacity Chart

Rated lifting capacity charts (1) and (2) When outriggers are used.

- The rated lifting capacity chart indicates the maximum load which can be lifted by this crane provided it is level and standing on firm, level ground. It includes the mass of the hook and all other slings etc.
 - The area of the rated lifting capacity chart surrounded by a bold line is the area in which capacity determined by the structual strength of the crane. Elsewhere the crane's stability is the deciding factor.
- The working radius is based on the actual radius including boom deflection.Always use the actual working radius as the standard criterion for crane operation.
- The jib working radius is based on the jib mounted on the end of the 28.0m boom. If the boom is at any other length use the boom angle as the standard criterion for crane operation. (The jib is optional.)
- Never operate the jib when the outriggers are fully retracted. (The jib is optional.)
- 5. The rated lifting capacity of the rooster sheave is the rated lifting capacity of the boom minus the mass of all attached slings etc.to the boom, with an upper limit of 4,000Kg.


{The hook for use with the rooster sheave is the 4.0 ton hook (mass 60kg) with one part of line.}

- If the boom length exceeds the rated length use the rated lifting capacity for the rated length or for the next highest boom length step, whichever gives the smaller rated lifting capacity.
- 7. If you are working with the boom while the jib is rigged subtract 1,000kg from the rated lifting capacity as well as subtracting the mass of the slings etc. Do not use the rooster sheave in this situation. (The jib is optional.)
- 8. In whatever working conditions the corresponding boom critical angle is shown in the table. Lowering the boom below the critical angle could cause the machine to tip over even if the crane is not carrying any added load.
- The standard parts of line for each boom length are as shown in the table. If you work with a nonstandard number of parts of line take 3,800kg as the maximum load on any part of the wire rope.
- The rated lifting capacity does not take the effects of wind into account.
 Stop work immediately if the wind speed reacts 10m/s even briefly.
- Kato bears no liability whatsoever for damage, crane tipping or other accident caused by crane operations which differ from the directions contained in the instruction manual and the warning labels.

Rated lifting capacity chart (3) When outriggers are not used.


- 1. The rated lifting capacity chart indicates the maximum load which can be lifted by this crane provided it is standing on firm, level ground with all tyres inflated to the rated pressure and with the suspension lock cylinders fully retracted. It includes the mass of the hook and all other slings etc. The area of the rated lifting capacity chart surrounded by a bold line is the area in which capacity is determined by the structural strength of the crane. Elsewhere the crane's stability is the decid-
- The rated lifting capacity differs between the front area capacity and the full range capacity. When slewing from the front to the side take care that the crane could not be overloaded.


ing factor. (Rated tyre pressure: 9.0bar)

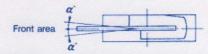


Crane operation	Stationary on rubber operation	Pick and carry operation
Area α°	1°	1"

- 3. Do not work with the jib or with a boom length of more than 15.2m. (The jib is optional.)
- Always engage the parking brake before you start stationary on rubber operation.
- For pick and carry operation the high/low speed switch must be switched to "ON" (low range) and the shift lever set to speed 1.
- For pick and carry operation lower the load to just above the ground and keep your speed strictly less than 2km/h to avoid swinging the load.
 Take particular care to avoid sharp cornering and sudden starts and stops.
- Never operate the crane during pick and carry operation. The slewing brake must always be engaged.
- 8. Other than the above precautions observe points (2), (5), (6), (8), (9), (10) and (11) of the section "Precautions on outrigger use".

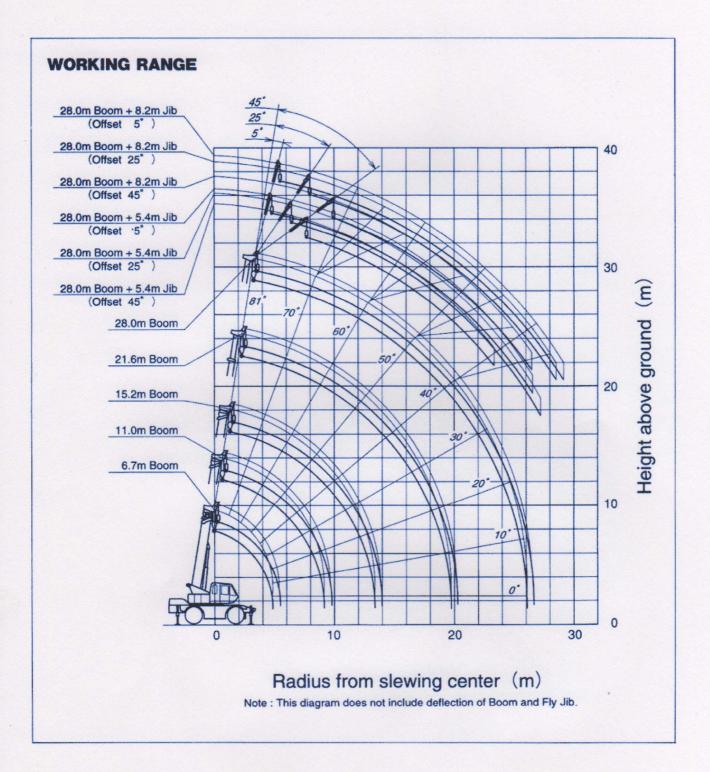

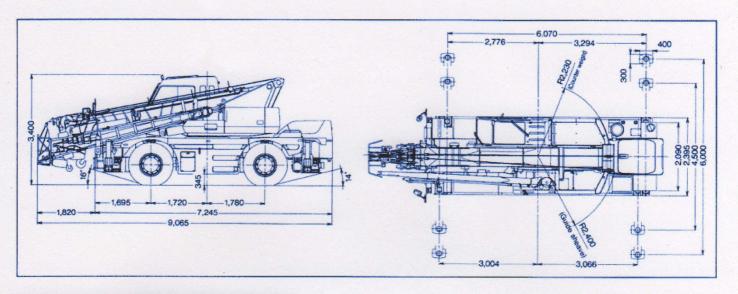

Minimum Road Width for Right-Angle Turn

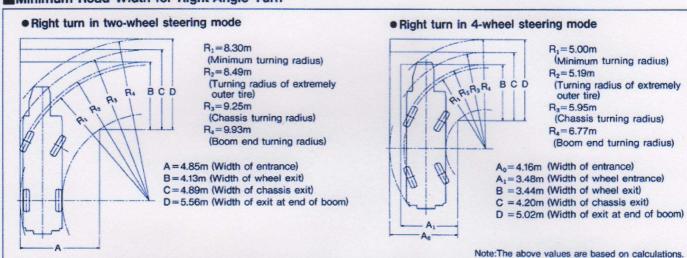

*NOTE: KATO products and specifications are subject to improvements and changes without notice.



KATO WORKS CO.,LTD.

9-37, Higashi-ohi 1-chome, Shinagawa-ku, Tokyo 140-0011 Japan.

Tel. : Head Office Tokyo (03)3458-1111

Overseas Marketing Department Tokyo (03)3458-1115

Telex: 222-4519 (CRKATO J) Fax.: Tokyo (03)3458-1152 Cable: CRANEKATO TOKYO